

## Parts List — UP5062

Part Number	Description	Config Step	Qty
A510329	WELD, PRODUCT BOOT - DUAL - SEED ROW W/ LIQUID - STD - BLK	Configuration Type	32
A510339	WELD, PRODUCT BOOT - DUAL - SEED ROW W/ LIQUID - MIR - BLK	Configuration Type	32
250875	MANUAL, OPERATORS – TOOLBAR/UPII/NOVA - STAGE 1	Configuration Type	1
480778	BDL, DISTRIBUTION - ULTRAPRO II - 64 RUN - 8 ZONE - TRIPLE PRODUCT	Tank Size	1
412303	BDL, STRAP - C/W SIDE RELEASE BUCKLE - STAGE 2	Tank Size	128
412670	BDL, DELIVERY WING HOSE HOLDER - SHORT - STAGE 2	Tank Size	6
412671	BDL, DELIVERY WING HOSE HOLDER - MEDIUM - STAGE 2	Tank Size	12
412672	BDL, DELIVERY WING HOSE HOLDER - LONG - STAGE 2	Tank Size	2
414009	BDL, ULTRAPRO II - 550 BU - 8 ZONE - WIDE M	Tank Configuration	1
270225	SCALE, DIGITAL - HANDHELD	Tank Configuration	1
451144-1	BDL, SEEDBDL, SEEDMASTER, REMOTE TANK MONITOR - STAGE 2	Tank Configuration	1
412140-3	ASSY, CANOLA ROLLER CARTRIDGE - UPII - 8 RUN - STAGE 2	Tank Configuration	8
412103-3	ASSY, STANDARD ROLLER CARTRIDGE - UPII - 8 RUN - W/ CLAMPS - STAGE 2	Tank Configuration	16
900800	BDL, SHIPPING FRAME - UPII 360	Assembled/Unassembled	1